


# HYDRAULIC CYLINDER

## INSTRUCTIONS FOR USE

1. The product is consisted of a manual oil pump and jack. It boasts compact structure and convenience for use.
2. When using it, firstly, please insert the quick connector (6) of the rubber tube of oil pump into the connector of the jack, and screw down the sheathing of the quick connector, and then screw down the oil return valve (4) and release the hexagonal socket screw (2) at the rear of the pump, pull the handle (1) up and down to operate it.
3. Confirm the center of gravity of the object to be lifted and select the working point when you use it. The object to be lifted **MUST NOT EXCEED** the rated weight of the jack, do not operate the product under overload conditions.
4. Please screw out the hexagonal screw (3) at the rear of the pump to add oil if needed. The oil must be clean and use YU-N15 hydraulic oil.

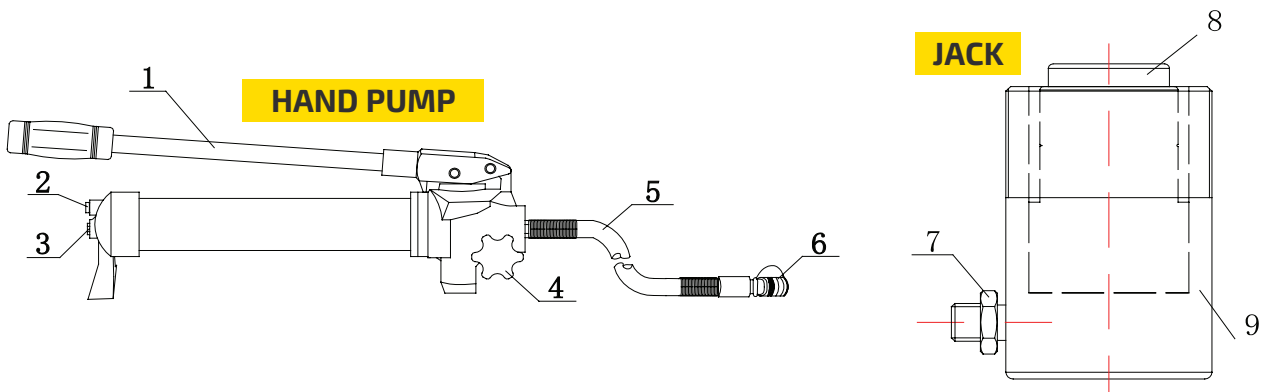

- |                           |                     |                 |
|---------------------------|---------------------|-----------------|
| 1. Handle                 | 4. Oil Return Valve | 7. Connector    |
| 2. Hexagonal Socket Screw | 5. Leather Tubing   | 8. Head         |
| 3. Hexagonal Screw        | 6. Quick Connector  | 9. Oil Cylinder |

MODEL	TONNAGE (T)	STROKE (MM)	OIL CAPACITY (CM <sup>3</sup> )	CLOSED HEIGHT (MM)	EXTENDED HEIGHT (MM)	OUTSIDE DIAMETER (MM)	INSIDE DIAMETER (MM)	PISTON ROD DIAMETER (MM)	NET WEIGHT (KG)
TUNHYDCY30/100	30	100	471	187	287	103	75	65	10.7
TUNHYDCY30/150	30	150	705	237	387	103	75	65	13.5