


MULTI-STAGE HYDRAULIC CYLINDER

INSTRUCTIONS FOR USE

1. The product is comprised of a manual oil pump and jack. It is compact and easy to use.
2. For first use, please insert the quick connector (5) of oil pump into the connector (6) of the jack, and screw down the sheathing of the quick connector
3. Screw down the oil return valve (3) and release the hexagonal socket screw (2) at the rear of the pump, then pull the handle (1) up and down to operate.
4. Check the center of gravity of the object to be lifted and select a suitable working point when it is ready for use.
5. THE OBJECT TO BE LIFTED MUST NOT EXCEED THE RATED LIFTING WEIGHT.
6. DO NOT OPERATE THE HYDRAULIC CYLINDER IF THERE IS A CHANCE OF OVERLOADING
7. Screw out the hexagonal screw (2) at the rear of the pump to add/change oil if needed. The oil must be clean and use N15 hydraulic oil.

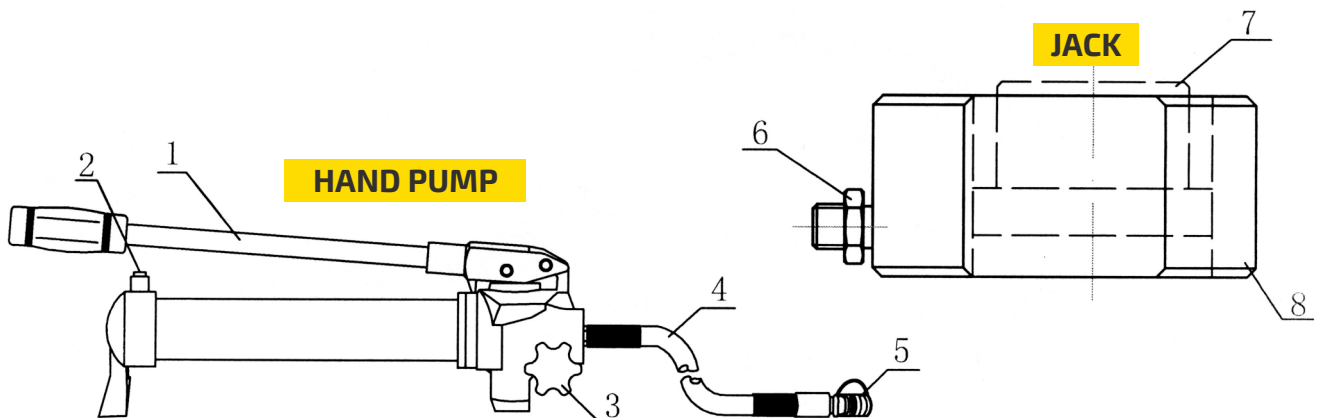

- | | | |
|---------------------------|--------------------|-----------------|
| 1. Handle | 4. Leather Tubing | 7. Head |
| 2. Hexagonal Socket Screw | 5. Quick Connector | 8. Oil Cylinder |
| 3. Oil Return Valve | 6. Connector | |

MODEL	TONNAGE (T)	STROKE (MM)	OIL CAPACITY (CM ³)	CLOSED HEIGHT (MM)	EXTENDED HEIGHT (MM)	DIMENSIONS (L X W)	NET WEIGHT (KG)
TUNHYDCY30/54M	30	54	123	64	118	123 x 98	4.7
TUNHYDCY50/16L	50	66	188	74	140	148 x 120	7.9